


2005 ACCESSORIES & EQUIPMENT

Interior Trim - MX-5 Miata

DASHBOARD REMOVAL/INSTALLATION

1. Disconnect the negative battery cable.
2. Remove the driver-side air bag module. (See **DRIVER-SIDE AIR BAG MODULE REMOVAL/INSTALLATION** .)
3. Remove the passenger-side air bag module. (See **PASSENGER-SIDE AIR BAG MODULE REMOVAL/INSTALLATION** .)
4. Remove the A-pillar trim. (See **A-PILLAR TRIM REMOVAL/INSTALLATION**.)
5. Remove the console. (See **CONSOLE REMOVAL/INSTALLATION**.)
6. Remove the lower panel.
7. Remove the instrument cluster. (See **INSTRUMENT CLUSTER REMOVAL/INSTALLATION** .)
8. Remove the glove compartment. (See **GLOVE COMPARTMENT REMOVAL/INSTALLATION**.)
9. Remove the hood release lever.
10. Remove the control wire of the heater unit and blower unit. (See **CLIMATE CONTROL UNIT REMOVAL** .) (See **CLIMATE CONTROL UNIT INSTALLATION** .)
11. Remove the installation bolts and nuts fixing the steering shaft to the dashboard, and pull down the steering shaft.
12. Remove in the order indicated in the table.

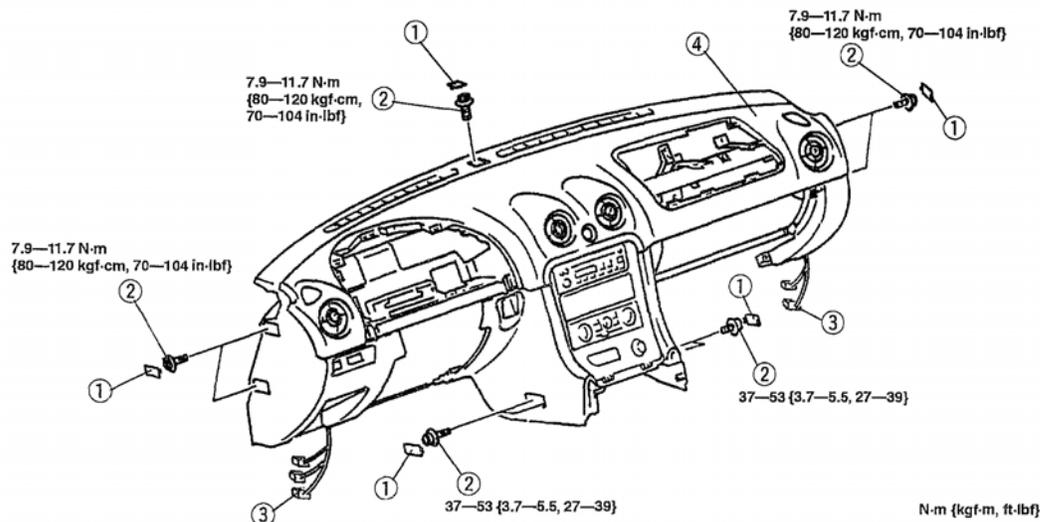

1	Cover
2	Bolt


3	Connector
4	Dashboard

Fig. 1: Removing Dashboard - With Torque Specifications
 Courtesy of MAZDA MOTORS CORP.

13. Install in the reverse order of removal.

DASHBOARD DISASSEMBLY/ASSEMBLY

1. Disassemble in the order indicated in the table.

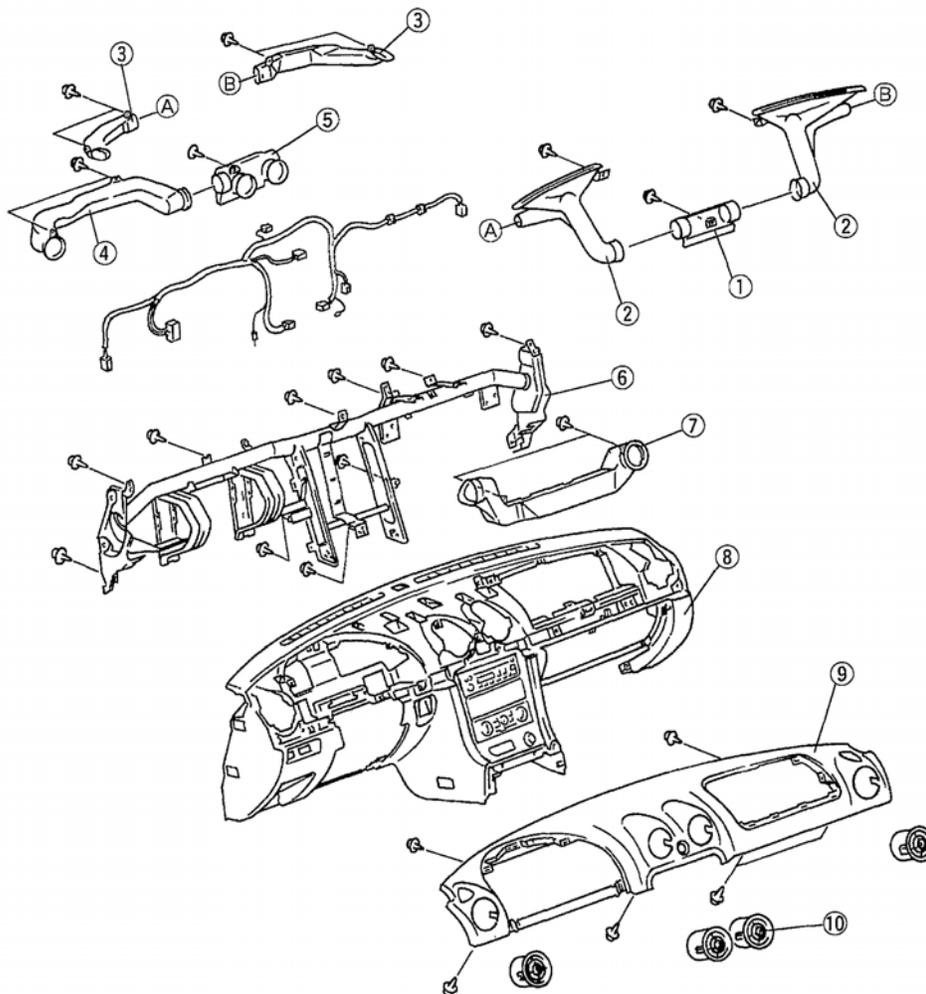

1	Defroster duct
2	Defroster nozzle
3	Side demister nozzle
4	Duct
5	Center duct

6	Dashboard member
7	Duct
8	Dashboard
9	Pad
10	Ventilator grille

G03638888


Fig. 2: Disassembling Dashboard

Courtesy of MAZDA MOTORS CORP.

2. Assemble in the reverse order of disassembly.

CENTER PANEL REMOVAL/INSTALLATION

1. Disconnect the negative battery cable.
2. Remove the console.
3. Remove the screws.
4. Pull the center panel, then disengage clips A and B from the body.
5. Disconnect the cigarette lighter connector.

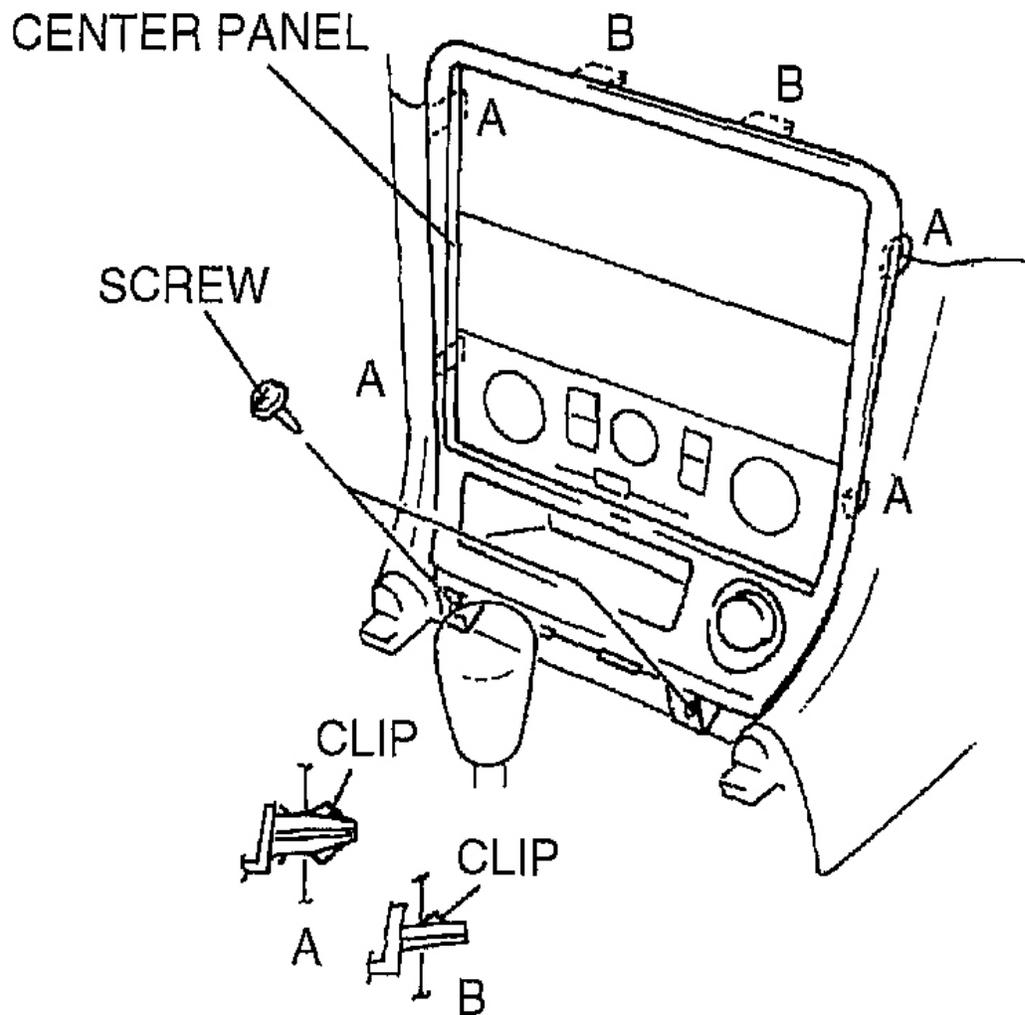


G03638889

Fig. 3: Removing Center Panel
Courtesy of MAZDA MOTORS CORP.

6. Install in the reverse order of removal.

COLUMN COVER REMOVAL/INSTALLATION

1. Remove the screws, then remove the column cover.

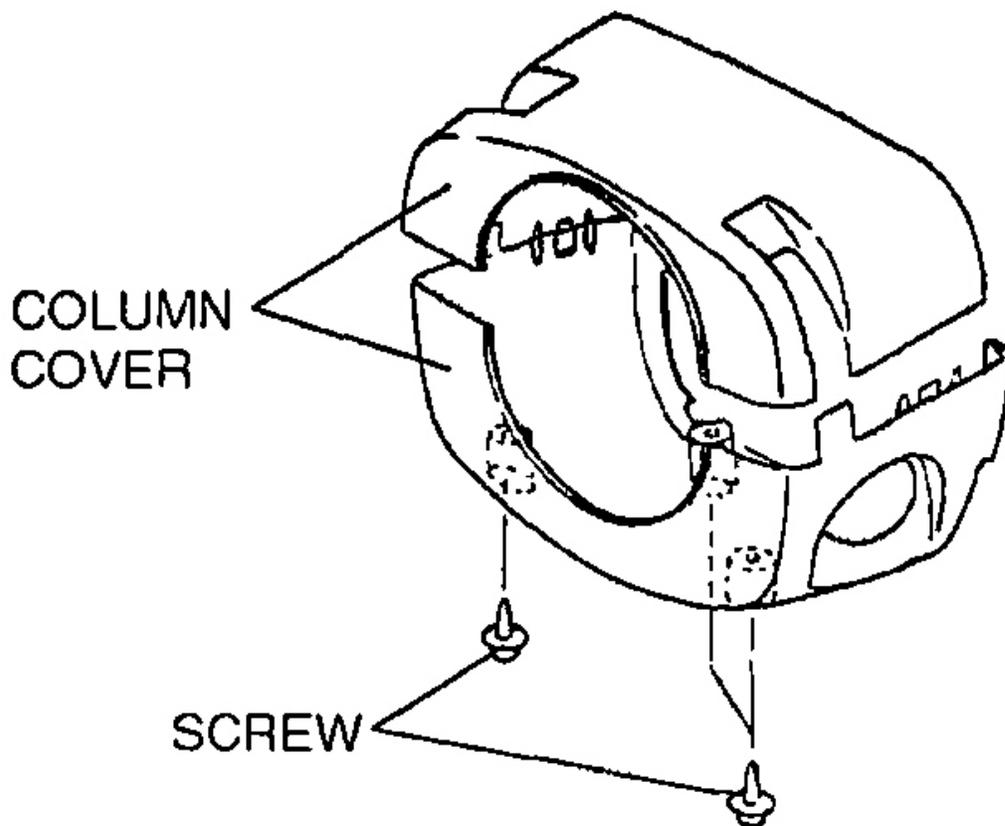

G03638890

Fig. 4: Removing Column Cover
Courtesy of MAZDA MOTORS CORP.

2. Install in the reverse order of removal.


CONSOLE REMOVAL/INSTALLATION

1. Disconnect the negative battery cable.
2. Remove in the order indicated in the table.

2005 Mazda MX-5 Miata

2005 ACCESSORIES & EQUIPMENT Interior Trim - MX-5 Miata

1	Power window switch
2	Shift lever knob (MT)
3	Console

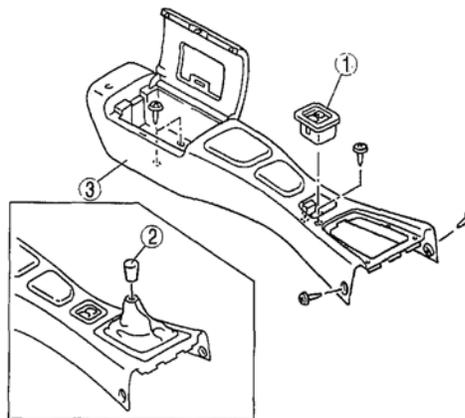

G03638891


Fig. 5: Removing Console
Courtesy of MAZDA MOTORS CORP.

3. Install in the reverse order of removal.

CONSOLE DISASSEMBLY/ASSEMBLY

1. Disassemble in the order indicated in the table.

1	Cup holder
2	Console panel
3	Set plate (MT)
4	Boot (MT)
5	Console lid stopper
6	Console lid inner
7	Pin
8	Console lid lock
9	Console lid outer
10	Cover
11	Hole cover No.1
12	Hole cover No.2
13	Console

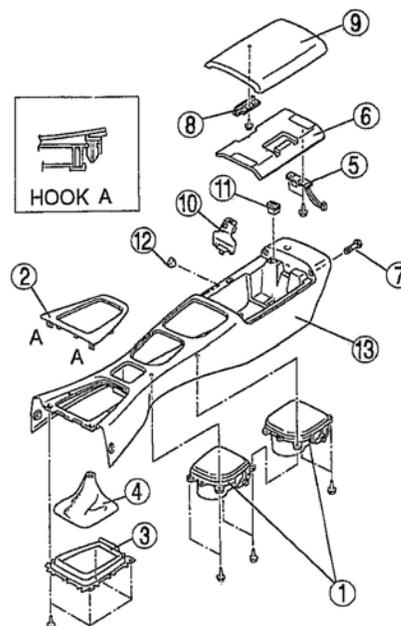

G03638892

Fig. 6: Disassembling Console
Courtesy of MAZDA MOTORS CORP.

2. Assemble in the reverse order of disassembly.

GLOVE COMPARTMENT REMOVAL/INSTALLATION

1. Bend the stoppers inward, then remove.
2. Turn the glove compartment downward and pull the clip.
3. Slide the glove compartment to the right, then disengage the pin.


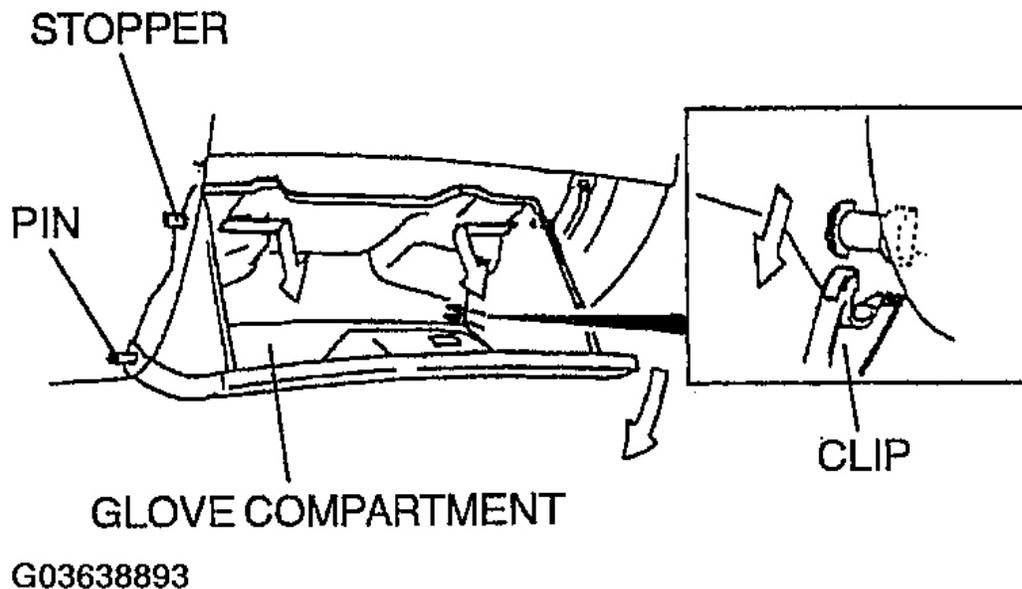


Fig. 7: Removing Glove Compartment
Courtesy of MAZDA MOTORS CORP.

4. Install in the reverse order of removal.

LOWER PANEL REMOVAL/INSTALLATION

1. Remove the screws.
2. Pull the lower panel toward you, then disengage tabs C and pins B from the body.
3. Pull the lower panel downward, then disengage tabs A from the body.

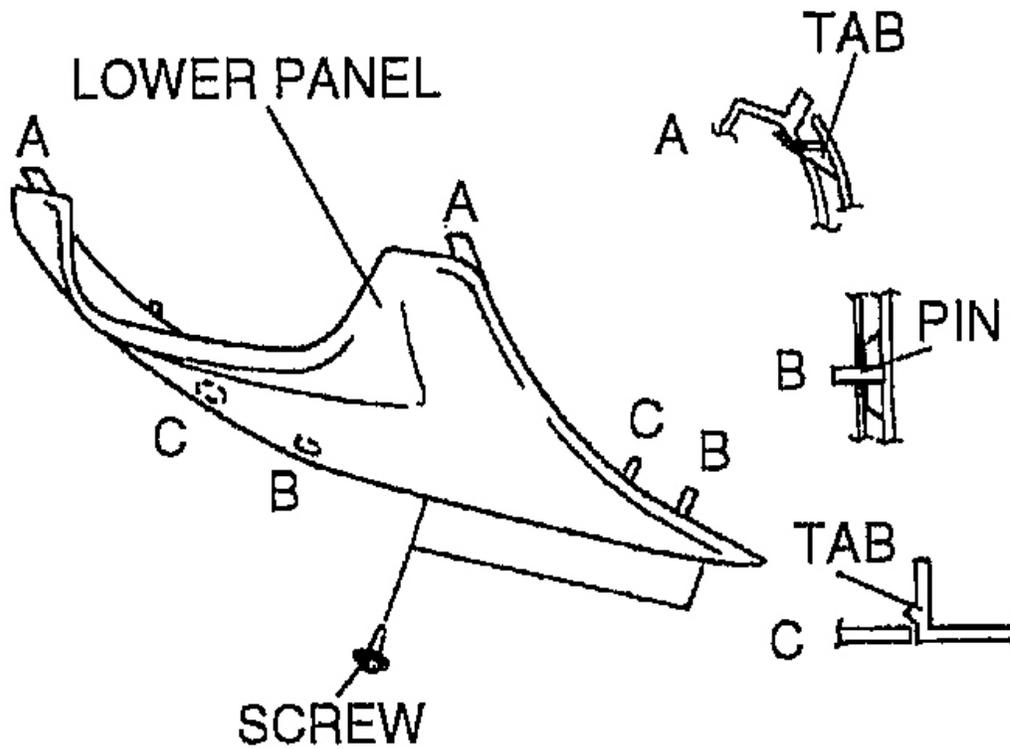


G03638894

Fig. 8: Removing Lower Panel
 Courtesy of MAZDA MOTORS CORP.

4. Install in the reverse order of removal.

METER HOOD REMOVAL/INSTALLATION

1. Pull the meter hood toward you, then disengage clips A and pin B from the body.

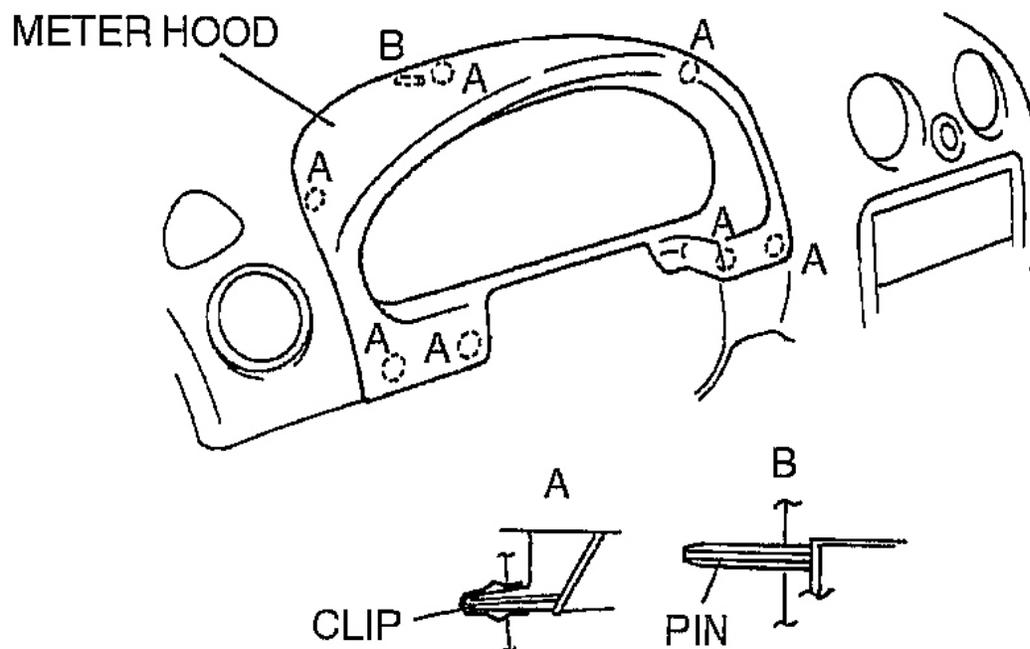


G03638895

Fig. 9: Removing Meter Hood
Courtesy of MAZDA MOTORS CORP.

2. Install in the reverse order of removal.

DOOR TRIM REMOVAL/INSTALLATION

1. Remove the screw.
2. Remove the inner handle cover.
3. Remove the fasteners.

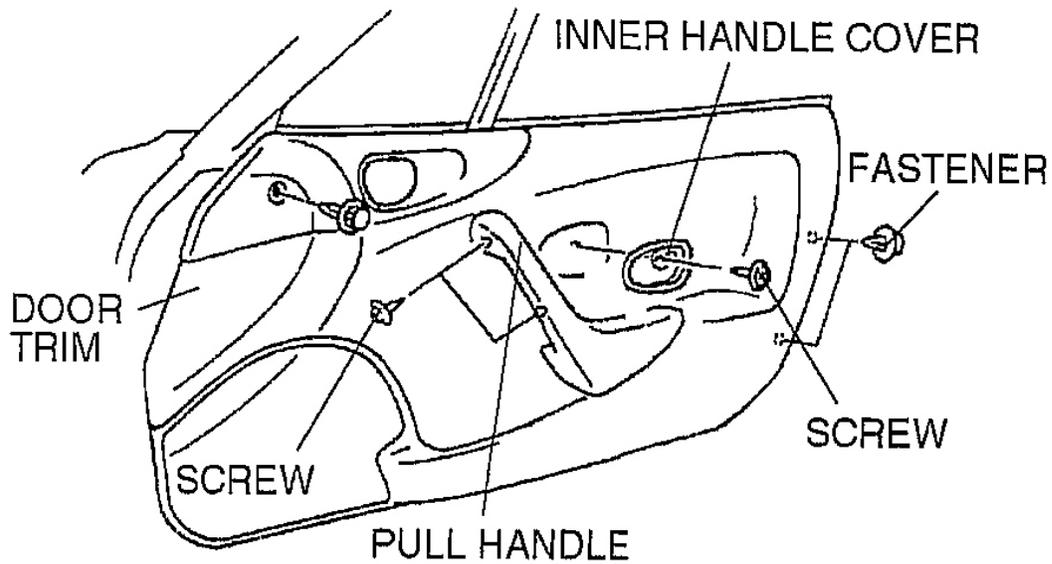


G03638896

Fig. 10: Removing Door Trim

Courtesy of MAZDA MOTORS CORP.

4. Pull the door trim, then disengage clips A and B from the body.
5. Lift the door trim, then disengage tabs C and D from the body.

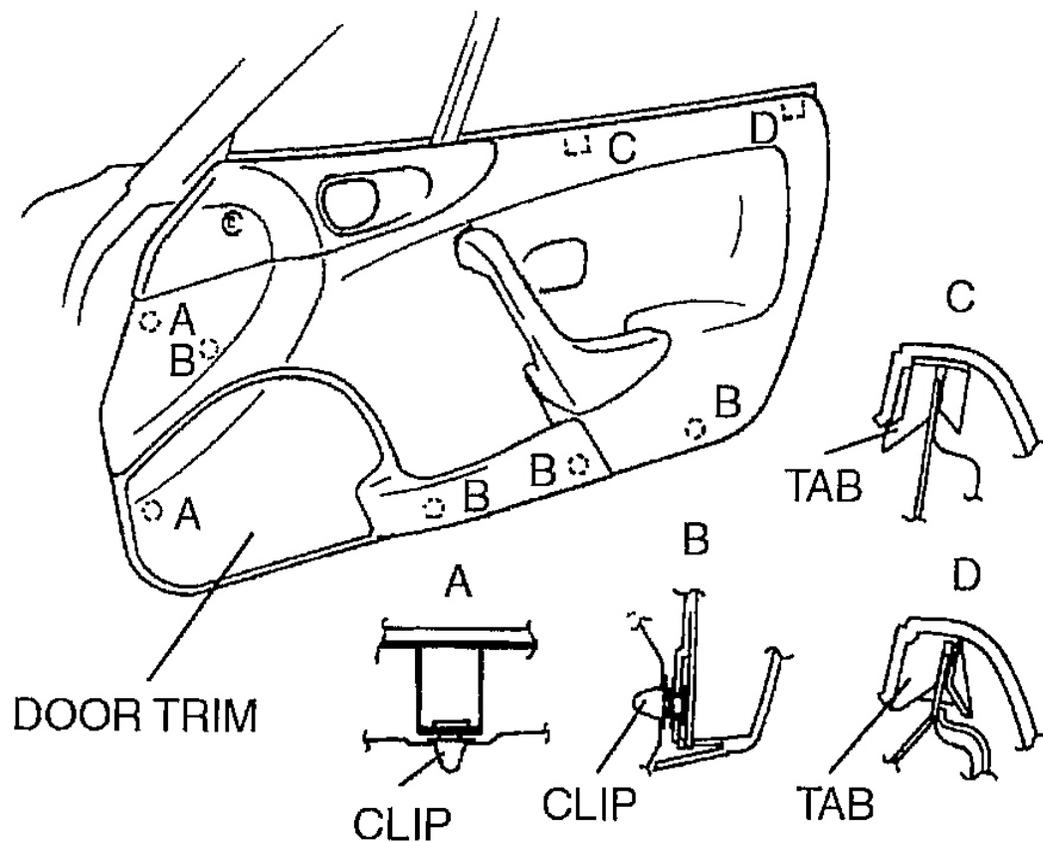

G03638897

Fig. 11: Identifying Door Trim Clips And Tabs
 Courtesy of MAZDA MOTORS CORP.

6. Install in the reverse order of removal.

A-PILLAR TRIM REMOVAL/INSTALLATION

1. Remove the front header trim.
2. Pull the A-pillar trim, then disengage clips A and pin B.
3. Pull the A-pillar trim upward, then disengage tab C from the body.


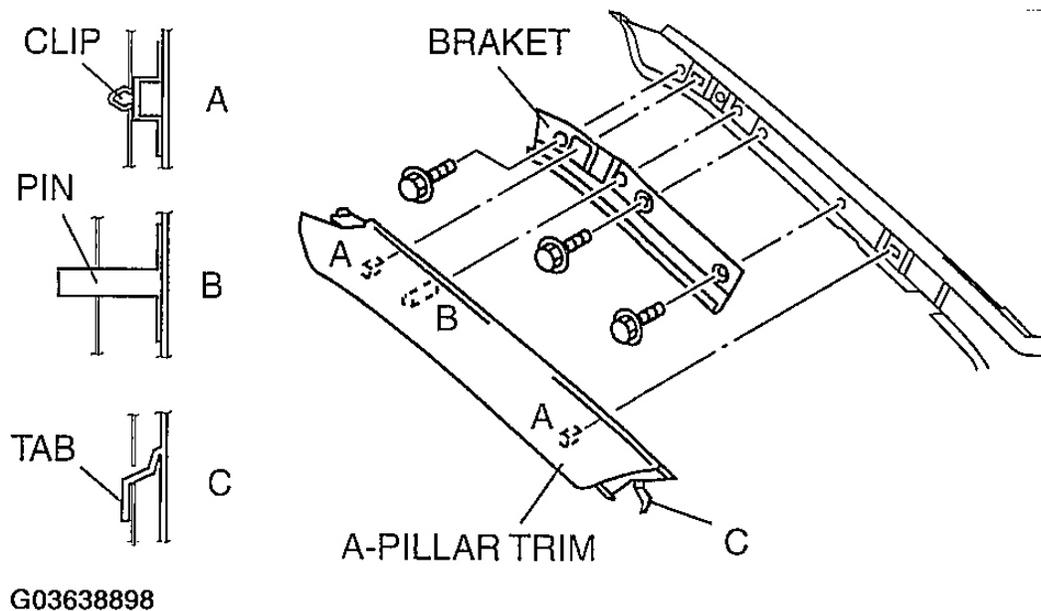


Fig. 12: Removing A-Pillar Trim
 Courtesy of MAZDA MOTORS CORP.

4. Install in the reverse order of removal.

FRONT HEADER TRIM REMOVAL/INSTALLATION

1. Disconnect the negative battery cable.
2. Remove the striker.
3. Remove the sunvisor.
4. Remove the interior light. (See INTERIOR LIGHT REMOVAL/INSTALLATION .)
5. Pull the front header trim toward you, then disengage the clips A, B and pin C from the body.

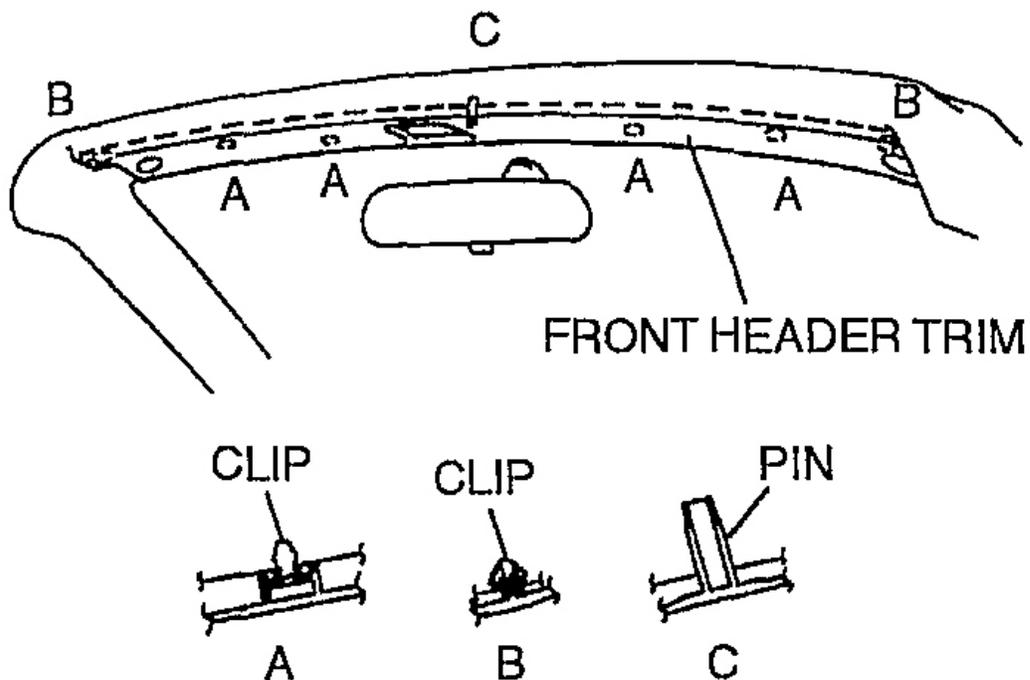


G03638899

Fig. 13: Removing Front Header Trim
 Courtesy of MAZDA MOTORS CORP.

6. Install in the reverse order of removal.

QUARTER TRIM REMOVAL/INSTALLATION

1. Remove the scuff plate.
2. Remove the beltline cover.
3. Remove the seaming welt.
4. Remove the bolt and fastener.
5. Remove the cover.
6. Pull the quarter trim toward you, then disengage clips A and pins B from the body.
7. Slide the quarter trim to the front side, then remove it.

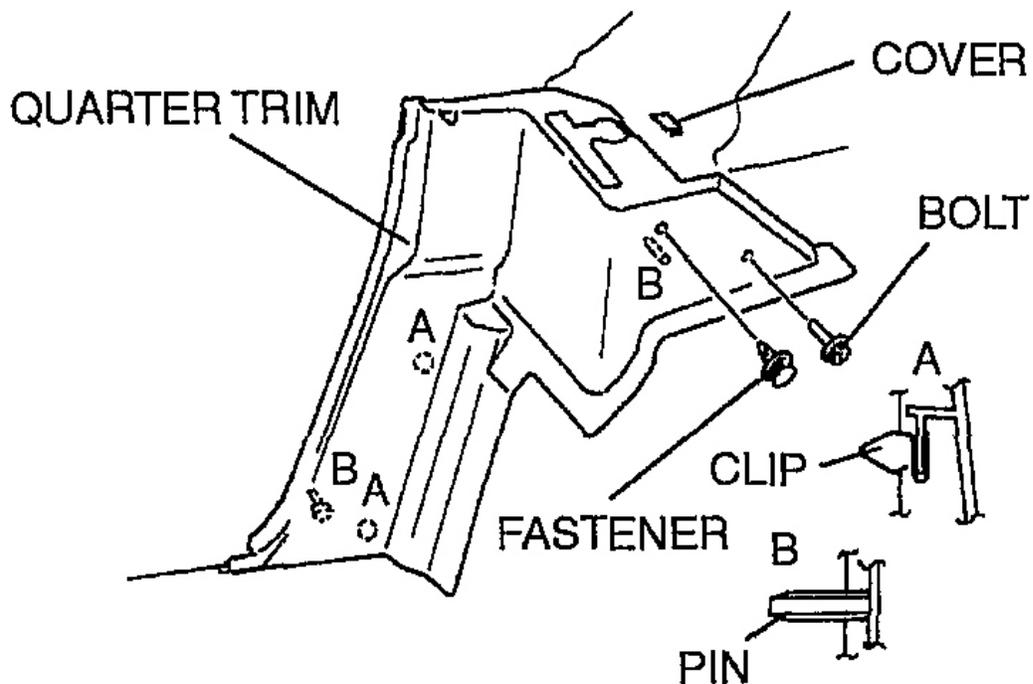

G03638900

Fig. 14: Removing Quarter Trim
Courtesy of MAZDA MOTORS CORP.

8. Install in the reverse order of removal.

REAR PACKAGE TRIM REMOVAL/INSTALLATION

1. Remove the quarter trim. (See QUARTER TRIM REMOVAL/INSTALLATION.)
2. Close the convertible top fully.
3. Remove the fasteners.
4. Remove the rear package trim.

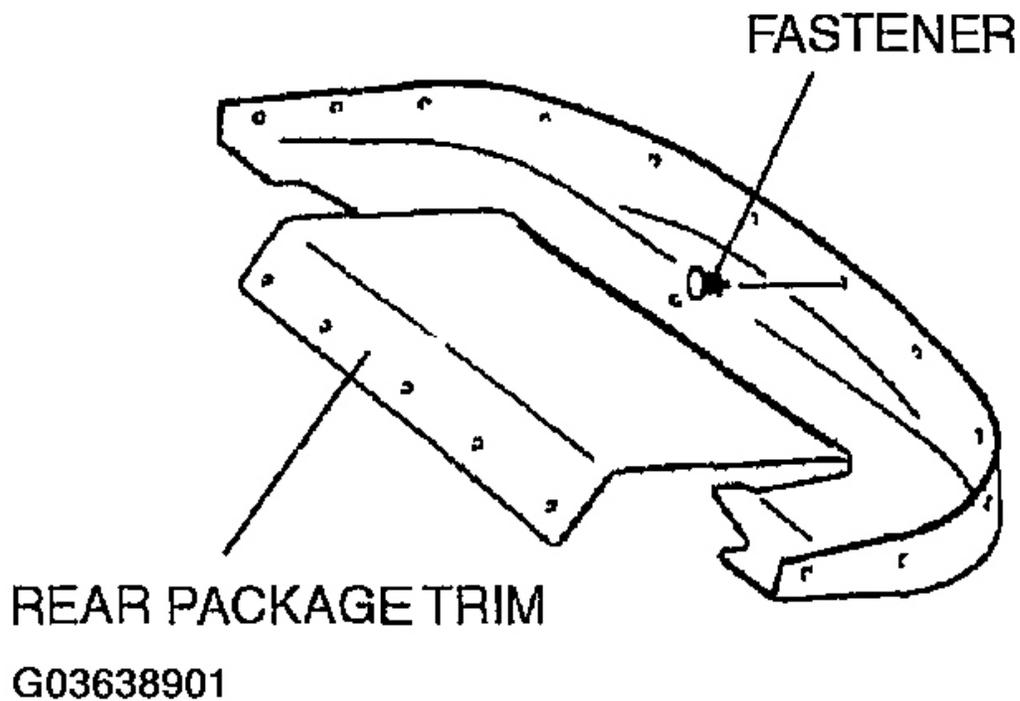


Fig. 15: Removing Rear Package Trim
Courtesy of MAZDA MOTORS CORP.

5. Install in the reverse order of removal.

SCUFF PLATE REMOVAL/INSTALLATION

1. Pull the scuff plate upward, then disengage clips A, C and pin B from the body.

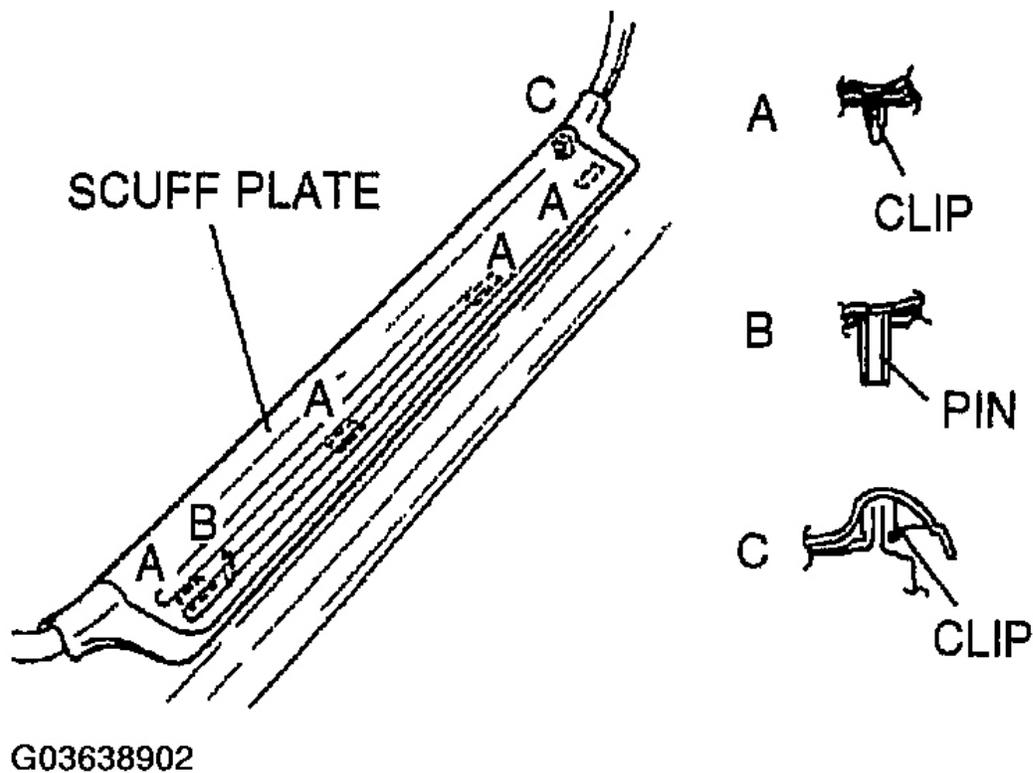


Fig. 16: Replacing Scuff Plate
Courtesy of MAZDA MOTORS CORP.

2. Install in the reverse order of removal.

FRONT SIDE TRIM REMOVAL/INSTALLATION

1. Remove the scuff plate.
2. Remove the fastener.
3. Pull the front side trim toward you, then disengage clip A and pins B from the body.
4. Install in the reverse order of removal.

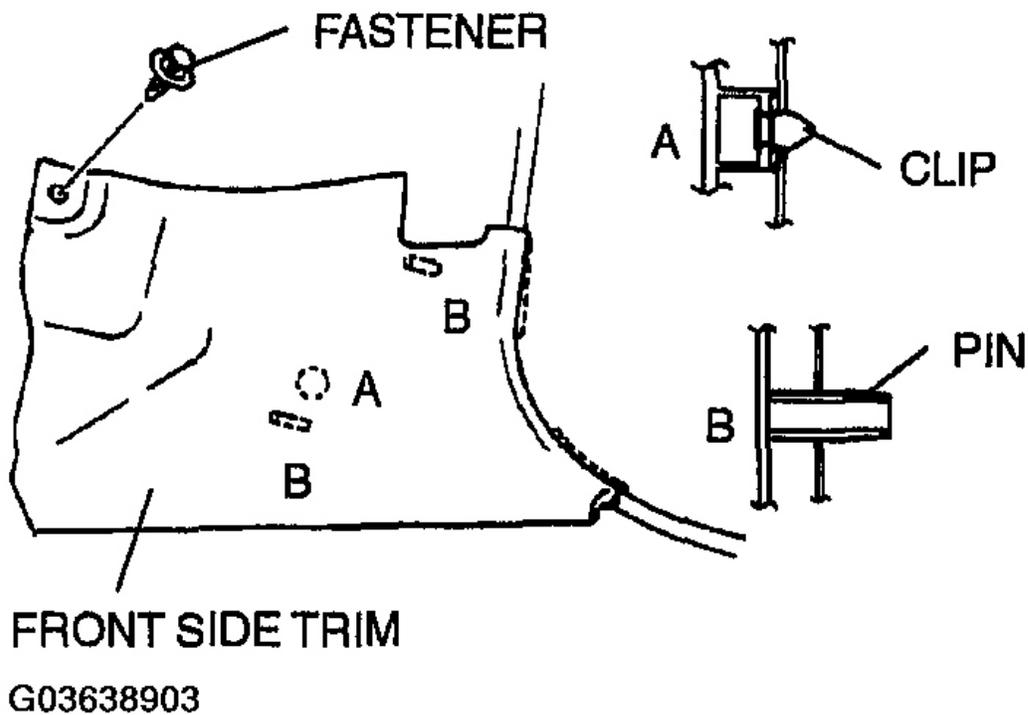


Fig. 17: Replacing Front Side Trim
Courtesy of MAZDA MOTORS CORP.


TRUNK END TRIM REMOVAL/INSTALLATION

1. Pull the internal trunk lid release handle to disengage it from the holder.
2. Remove in the order indicated in the table.

2005 Mazda MX-5 Miata

2005 ACCESSORIES & EQUIPMENT Interior Trim - MX-5 Miata

1	Internal trunk lid release handle cover (See Internal Trunk Lid Release Handle Cover Installation Note)
2	Fastener
3	Trunk end trim

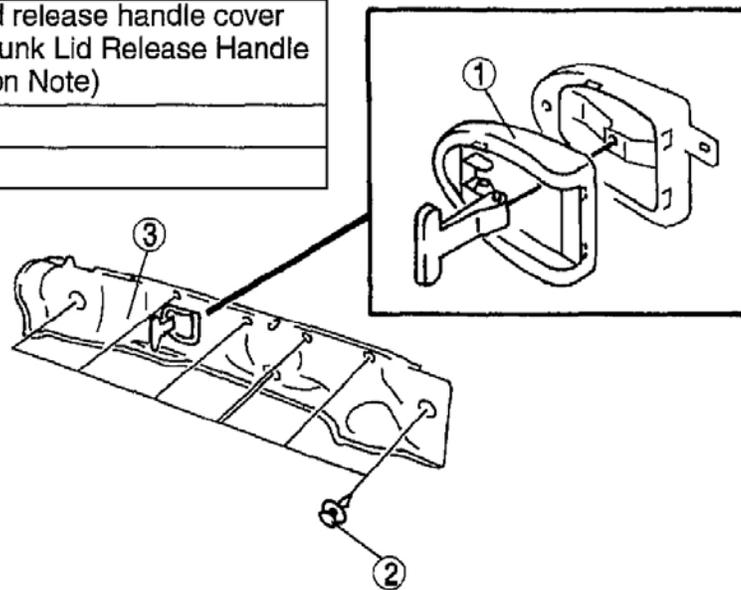

G03638904

Fig. 18: Removing Trunk End Trim
Courtesy of MAZDA MOTORS CORP.


3. Install in the reverse order of removal.

INTERNAL TRUNK LID RELEASE HANDLE COVER INSTALLATION NOTE

CAUTION:

- Always keep the internal trunk lid release handle firmly attached to the holder and in the recessed position. Not securing the handle this way could allow it to snag luggage in the compartment and open the trunk lid.

1. After installing the internal trunk lid release handle cover, attach the internal trunk lid release handle to the holder on the cover and in the recessed position.
2. Remove the trunk end trim.
3. Install in the reverse order of removal.

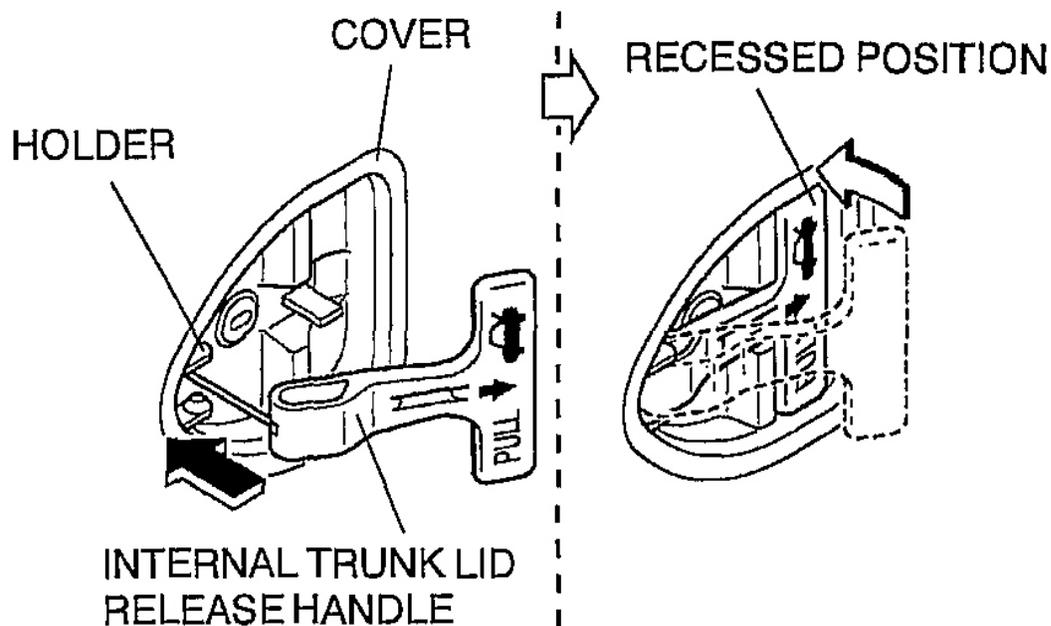

G03638905


Fig. 19: Installing Internal Trunk Lid Release Handle Cover

Courtesy of MAZDA MOTORS CORP.

TRUNK SIDE TRIM REMOVAL/INSTALLATION

1. Remove the fasteners.
2. Remove the trunk side trim.

DRIVER'S SIDE

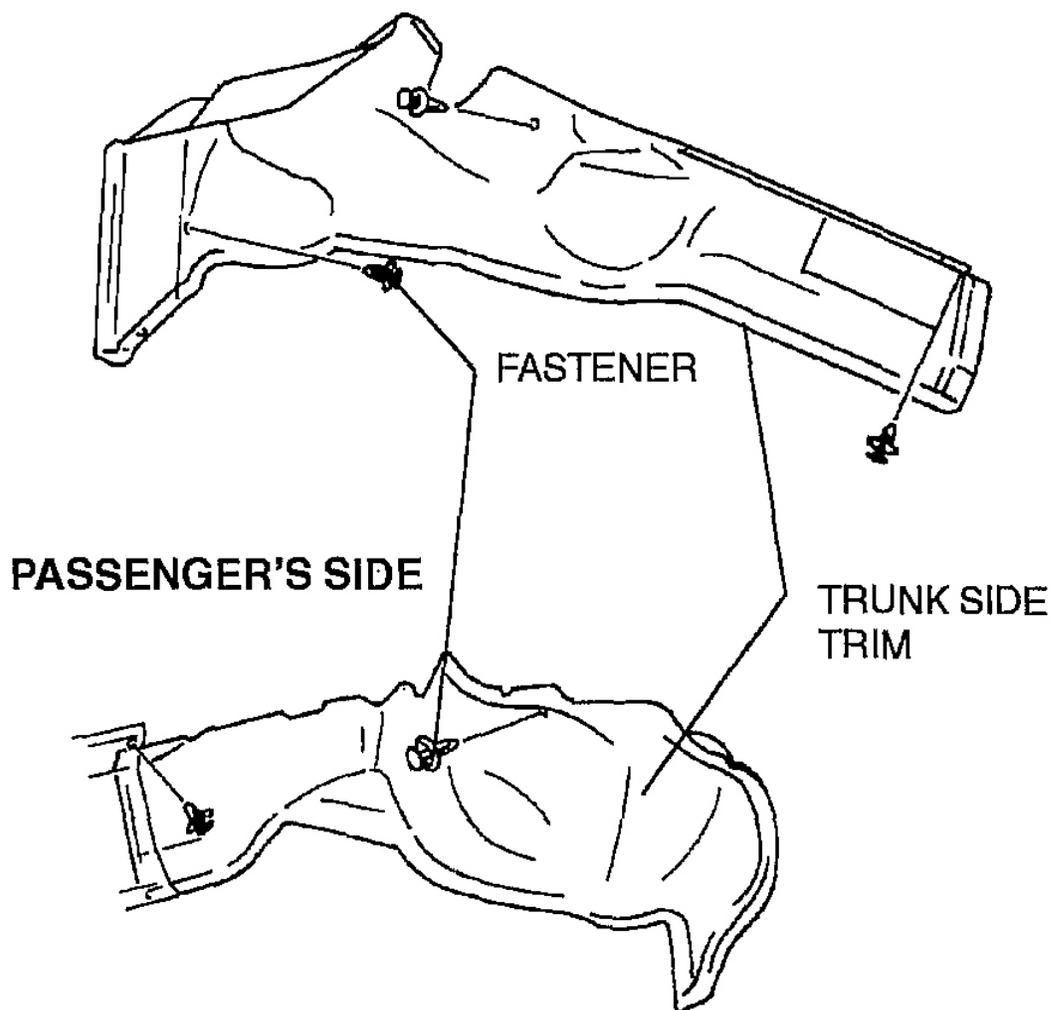


G03638906

Fig. 20: Removing Trunk Side Trim
Courtesy of MAZDA MOTORS CORP.

3. Install in the reverse order of removal.

TOP TRIM REMOVAL/INSTALLATION

1. Remove the fastener.
2. Pull the top trim outward, then disengage clips A from the body.

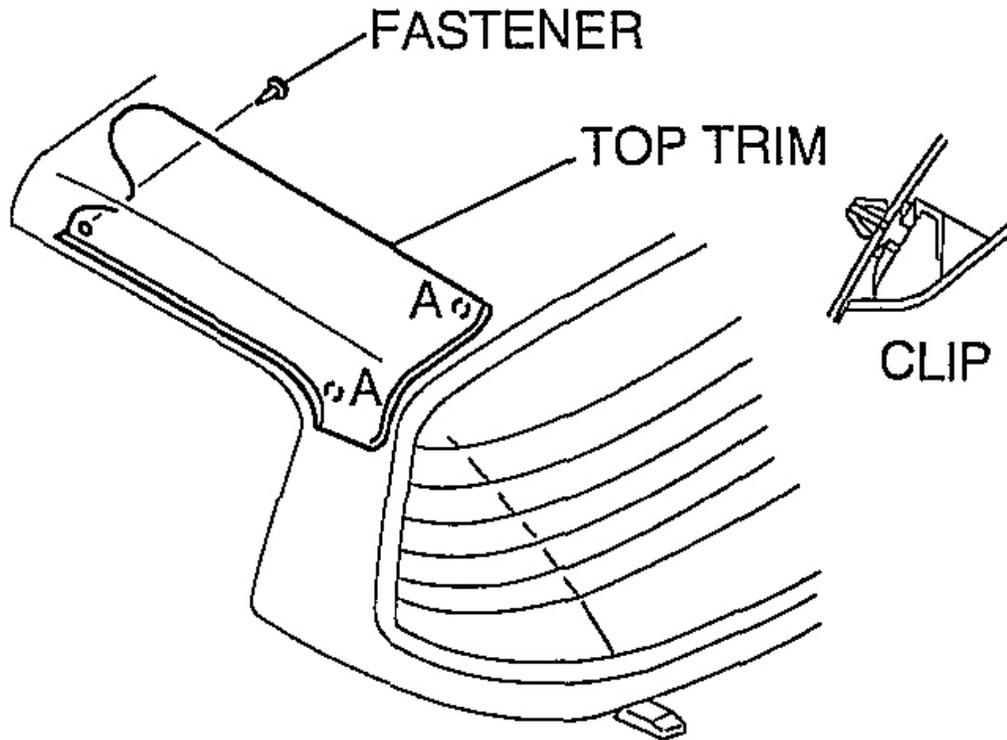

G03638907


Fig. 21: Removing Top Trim
Courtesy of MAZDA MOTORS CORP.

3. Install in the reverse order of removal.

FLOOR COVERING REMOVAL/INSTALLATION

1. Disconnect the negative battery cable.
2. Remove the seats.
3. Remove the dashboard. (See **DASHBOARD REMOVAL/INSTALLATION.**)
4. Remove the heater unit. (See **HEATER UNIT REMOVAL/INSTALLATION .**)
5. Remove the front side trims. (See **FRONT SIDE TRIM REMOVAL/INSTALLATION.**)
6. Remove the rear package trims. (See **REAR PACKAGE TRIM REMOVAL/INSTALLATION.**)
7. Remove the rear end mat.
8. Remove the seat belts. (See **SEAT BELT REMOVAL/INSTALLATION .**)
9. Remove the footrest.

10. Remove the fasteners.
11. Disengage the tabs A from the body.
12. Remove the floor covering.
13. Install in the reverse order of removal.

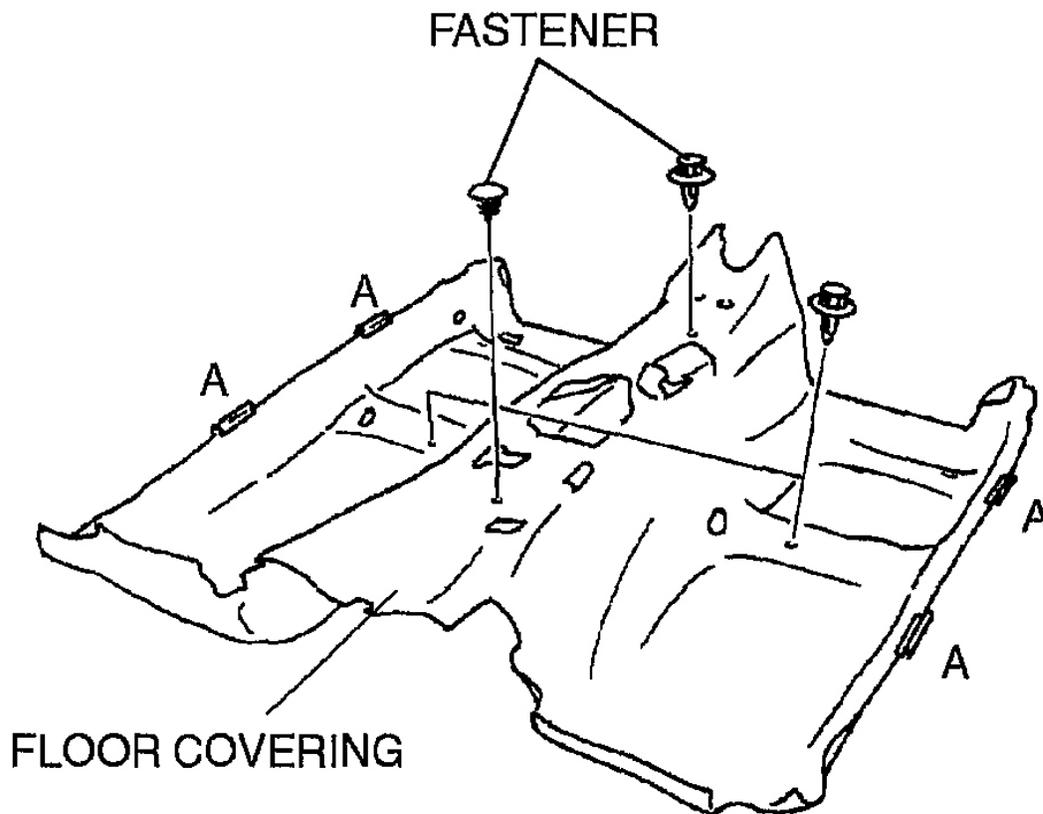

G03638908

Fig. 22: Removing Floor Covering
Courtesy of MAZDA MOTORS CORP.

REAR END MAT REMOVAL/INSTALLATION

1. Remove the fasteners.
2. Remove the rear end mat.
3. Install in the reverse order of removal.

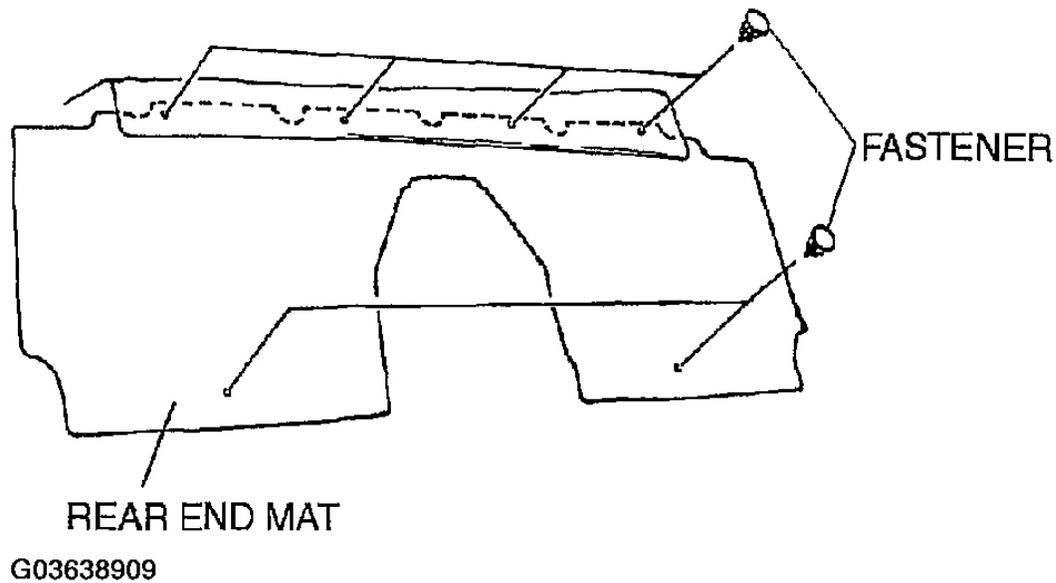



Fig. 23: Removing Rear End Mat
Courtesy of MAZDA MOTORS CORP.

AEROBOARD REMOVAL/INSTALLATION

1. Disconnect the negative battery cable.
2. Remove in the order indicated in the table.

2005 Mazda MX-5 Miata

2005 ACCESSORIES & EQUIPMENT Interior Trim - MX-5 Miata

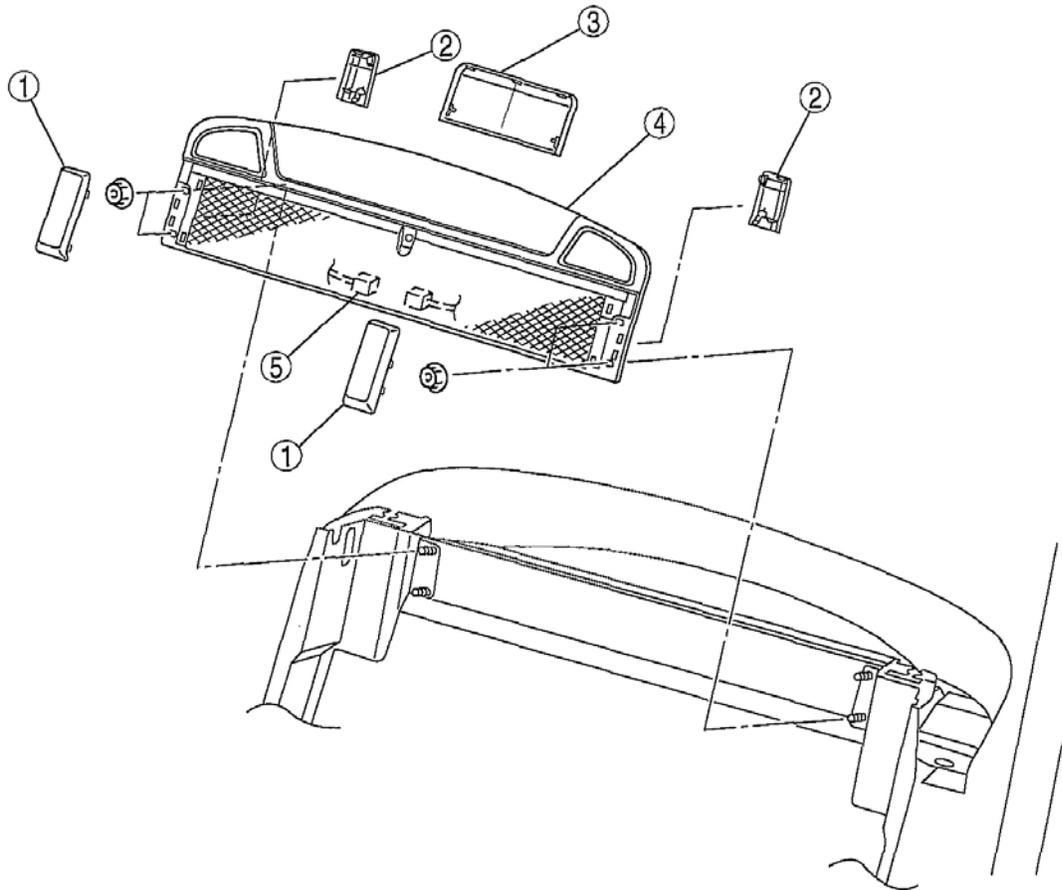

1	Belt cover (See Belt Cover Removal Note.)
2	Cover (See Cover Removal Note.)

3	Plate cover (See Plate Cover Removal Note.)
4	Aeroboard
5	Connector

G03638910

Fig. 24: Removing Aeroboard
Courtesy of MAZDA MOTORS CORP.

3. Install in the reverse order of removal.

BELT COVER REMOVAL NOTE

1. Pull the belt cover outward, detach clips A, B, and C from the aeroboard, and then remove the belt cover.


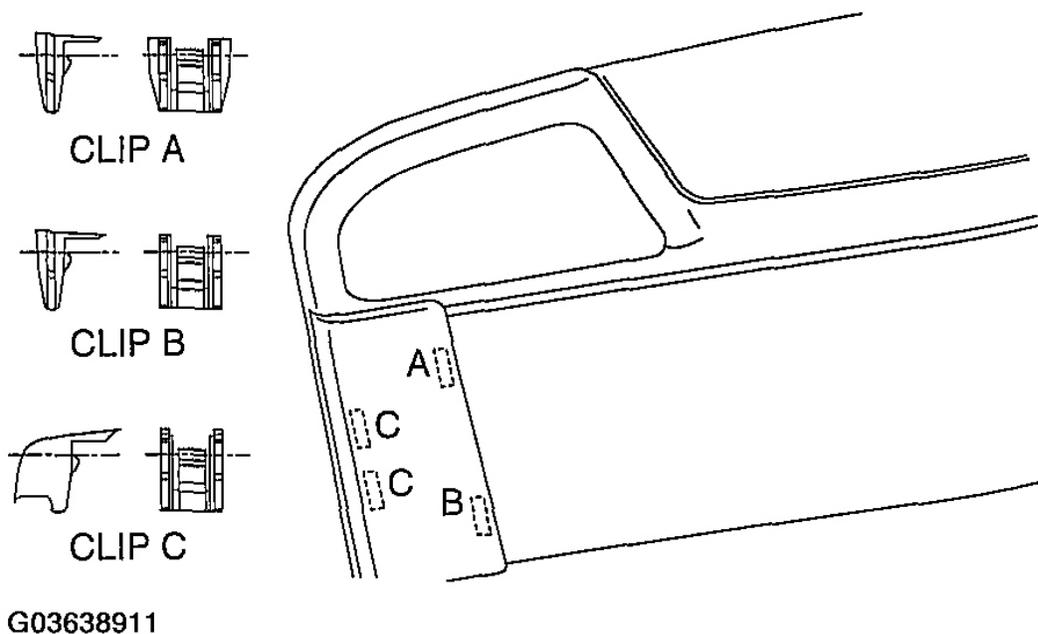


Fig. 25: Removing Belt Cover
Courtesy of MAZDA MOTORS CORP.

COVER REMOVAL NOTE

1. Insert a tape-wrapped flathead screwdriver into the service hole.
2. Pry with the screwdriver in the direction shown by the arrow to remove the cover.

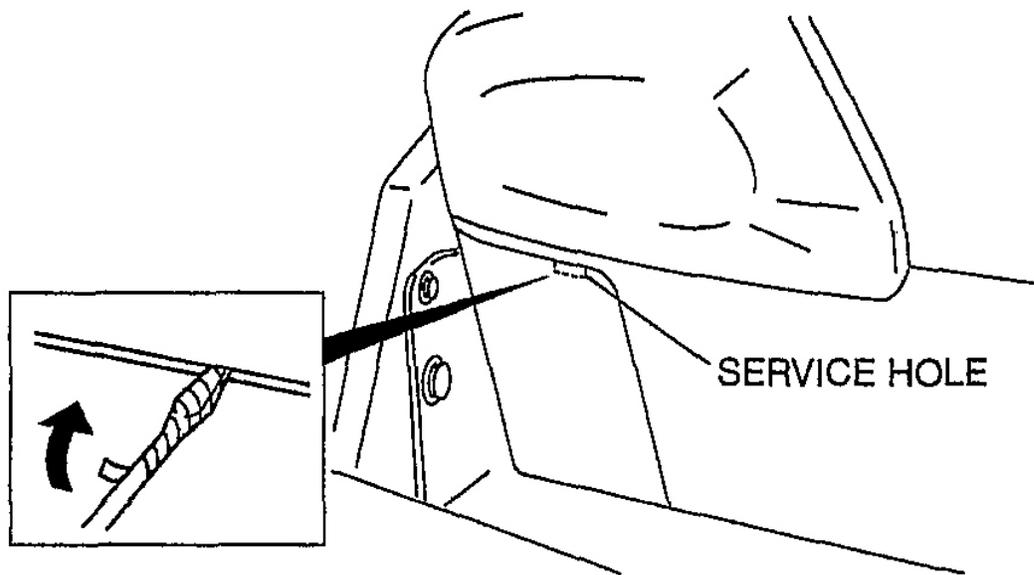


G03638912

Fig. 26: Removing Cover
Courtesy of MAZDA MOTORS CORP.

PLATE COVER REMOVAL NOTE

1. Insert a tape-wrapped flathead screwdriver into the service hole.
2. Pry with the screwdriver in the direction shown by the arrow to remove the cover.

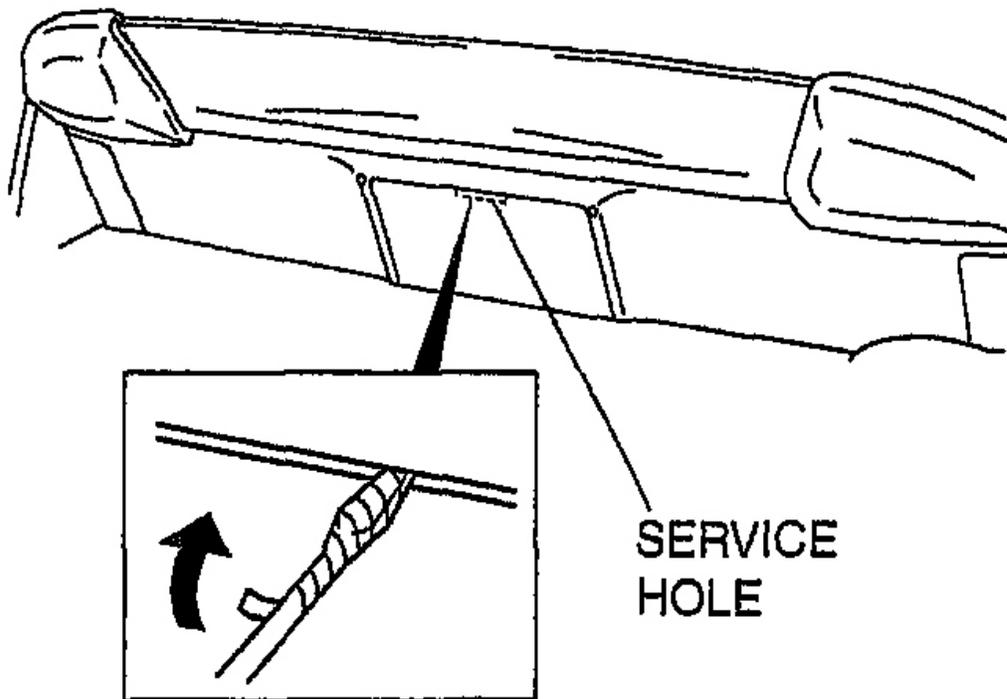

G03638913


Fig. 27: Removing Plate Cover
Courtesy of MAZDA MOTORS CORP.

AEROBOARD DISASSEMBLY/ASSEMBLY

1. Disconnect the negative battery cable.
2. Remove the aeroboard. (See **AEROBOARD REMOVAL/INSTALLATION.**)
3. Remove the aeroboard speaker. (See **AEROBOARD SPEAKER REMOVAL/INSTALLATION .**)
4. Remove the aeroboard speaker amplifier. (See **AEROBOARD SPEAKER AMPLIFIER REMOVAL/INSTALLATION .**)
5. Disassemble in the order indicated in the table.

2005 Mazda MX-5 Miata

2005 ACCESSORIES & EQUIPMENT Interior Trim - MX-5 Miata

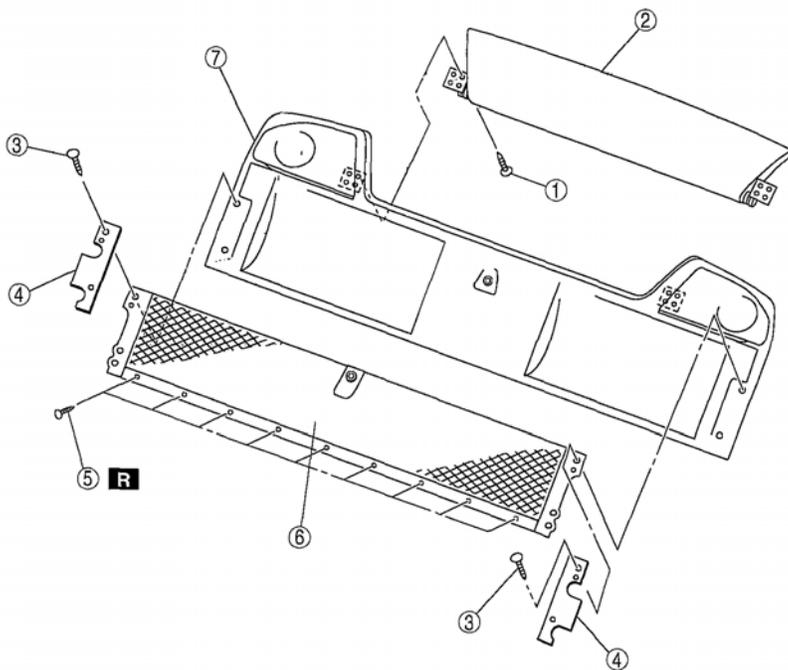

1	Screw
2	Aeroboard (upper)
3	Belt screw
4	Belt bracket

5	Rivet
6	Belt
7	Aeroboard (lower)

G03638914

Fig. 28: Disassembling Aeroboard
Courtesy of MAZDA MOTORS CORP.

6. Assemble in the reverse order of disassembly.